YCD12 series

IP65 Isolator Switches
OPERATION INSTRUCTION
Standard: IEC 60947-3



Before installing and using this product, please read this manual carefully and pay more attention to safety.

YCD12 series IP65 Isolator Switches Instruction

1. Model Specification

Model: YCD12-16 -3 Pole,16A
Model: YCD12-16 -4 Pole,16A
Model: YCD12-20 -3 Pole,20A
Model: YCD12-20 -4 Pole,20A
Model: YCD12-25 -3 Pole,25A
Model: YCD12-25 -4 Pole,25A
Model: YCD12-32 -3 Pole,32A
Model: YCD12-32 -4 Pole,32A
Model: YCD12-40 -3 Pole,40A
Model: YCD12-40 -4 Pole,40A
Model: YCD12-63 -3 Pole,63A
Model: YCD12-63 -4 Pole,63A
Model: YCD12-100 -3 Pole,100A
Model: YCD12-100 -4 Pole,100A

2. Installation Instructions

- These products should be installed by a competent person(e.g. qualified electrician) in accordance with these instructions and in compliance with the appropriate clauses of the current edition of the IEE wiring and building regulations.
- The Weathersafe Isolator range is designed to be mounted on a vertical flat surface.

- The rear box shall be mounted on the wall using fixings and wall plugs if necessary. The fixing dimensions are marked on the back of the rear box.
- The front moulding can only be removed when the switch is on the OFF position.
- The terminals should be tightened to a torque of 1.8Nm.

Do not exceed the maximum cables sizes:

- 20A
 2.5mm²
- 32A 6mm² • 40A and 63A 16mm²
- •100A 25mm²
- A cable gland of IP65 or higher should be used in order to maintain the IP rating.
- The relevant cable entry knockout should be carefully removed by scoring the groove around the required knockout with a sharp knife and then tapping it out with a small hammer onto a screwdriver inthe groove.
- When re-assembling the enclosure ensure that the gasket is fully in place in order to retain the IP65 rating.

- Tighten the screws supplied to refix the front cover in place. Do not overtighten. Use of an electric screwdriver is not recommended.
- Advice should be sought before installing this product in an environment where it is likely to be subjected to chemicals, oils or solvents.

3. Cleaning

Care should be taken when cleaning this product.

- Inside the lid should only be wiped with a clean dry cloth.
- The outside can be cleaned with mild detergent.
- Solvent based cleaners should not be used.

4. Specifications

YCD12-16/20										
Manua	al Mo	tor Co	ontrol	ler	IEC947,EN60947-3,VDE0660					
MOTOR	120V	240V	480V	600V	50Hz /O—	220V 440V	380V 690V			
3ph HP	1.5	3	5	5	lu=lth=AC21A	20A				
1ph HP	0.5	1.5	3	3	AC-23A 3ph	5.5kW	7.5kW			
	20A 6	500VA	IC.		AC-3 1ph	4.0kW	5.5kW			

YCD12-25/32										
Manua	al Mo	tor Co	ontrol	ler	IEC947,EN609	47-3,VD	E0660			
MOTOR	120V	240V	480V	600V	50Hz ∕○—	220V 440V	380V 690V			
3ph HP	1.5	3	5	5	lu=lth=AC21A	32A				
1ph HP	0.5	1.5	3	3	AC-23A 3ph	7.5kW	11kW			
	32A (500VA	IC.		AC-3 1ph	5.5kW	7.5kW			


YCD12-40										
Manua	l Mo	tor C	ontro	oller	IEC947-3,EN63947-3,VDE0660-107					
MOTOR 120V 240V 480V 600V 50Hz						220V	380V 440V	690V		
3ph HP	3	7.5	15	15	lu=lth=AC21A	40A				
1ph HP	1.5	3	7.5	7.5	AC-23A 3ph	7.5kW	15kW	18.5kW		
	404	600	VAC		AC-3 1ph	7.5kW	11kW	11kW		

YCD12-63										
Manua	l Mo	tor C	ontro	oller	IEC947-3,EN63947-3,VDE0660-107					
MOTOR	120V	240V	480V	600V	/ <u>50Hz</u> 220V 380V 6					
3ph HP	5	10	20	20	lu=lth=AC21A	63A				
1ph HP	2	5	10	10	AC-23A 3ph	11kW	22kW	22kW		
	63 <i>A</i>	600	VAC		AC-3 1ph	11kW	22kW	15kW		

YCD12-100										
Manua	l Mo	tor C	ontro	oller	IEC947-3,EN63947-3,VDE0660-10			0-107		
MOTOR	120V	240V	480V	600V	0V 50Hz 220V 380V 6					
3ph HP	10	25	50	50	lu=lth=AC21A	100A				
1ph HP	5	15	30	30	AC-23A 3ph	22kW	37kW	30kW		
1	00A	600V	AC		AC-3 1ph	18.5kW	30kW	22kW		

5. Overall and mounting dimensions(mm)

Model specification	D	Dimensions(mm) Mou					
specification	Р	N	М	С	A1	A2	
YCD12-16A	100	80	65	35	60	90	
YCD12-20A	100	80	65	35	60	90	
YCD12-25A	125	100	85	35	60	115	
YCD12-32A	125	100	85	35	60	115	
YCD12-40A	175	114	100	35	60	165	
YCD12-63A	175	114	100	35	60	165	
YCD12-100A	240	160	120	45	142	193	

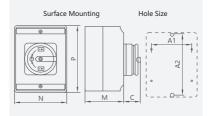



CNC ELECTRIC

Tel: 0086-577-61989999 Fax: 0086-577-61891122 www.cncele.com E-mail: cncele@cncele.com